



## OFF PEAK HEATING INSTRUCTIONS.

1. The heaters must have the spur switch marked panel heater left on during times you require heat. (This spur supplies the controls for the heater and the convection heater)
2. If you wish to use the storage heater for the following day, you must switch the spur switch marked as storage on during the night. Leaving the panel spur on.
3. The heater can only be controlled from the programmer located on the top right corner.
4. The heat generated from the storage heater during the night will be used during the day; if the room temperature suddenly drops the convector will then come on to bring the room temperature back up to what was set by the controls. Once back to temperature the convector will stop and the storage will continue to generate the heat.